

Quick Guide



HPP272WALLMOUNT HPP271 and HPP272 Mounting Accessory

Wall Mounting Bracket HPP272WALLMOUNT

The optional wall mounting bracket HPP272WALLMOUNT (material: AISI316L stainless steel) allows mounting either Vaisala HPP270 series H₂O₂ probe, HPP271 or HPP272, onto a wall inside the monitored process. The following figure shows an example installation for HPP272.

i Let the signal cable hang loosely so that it makes a bend. This prevents condensing water from running to the probe along the cable. Do not hang the probe by the signal cable.

i Make sure the signal cable you use is suitable for your biodecontamination process.

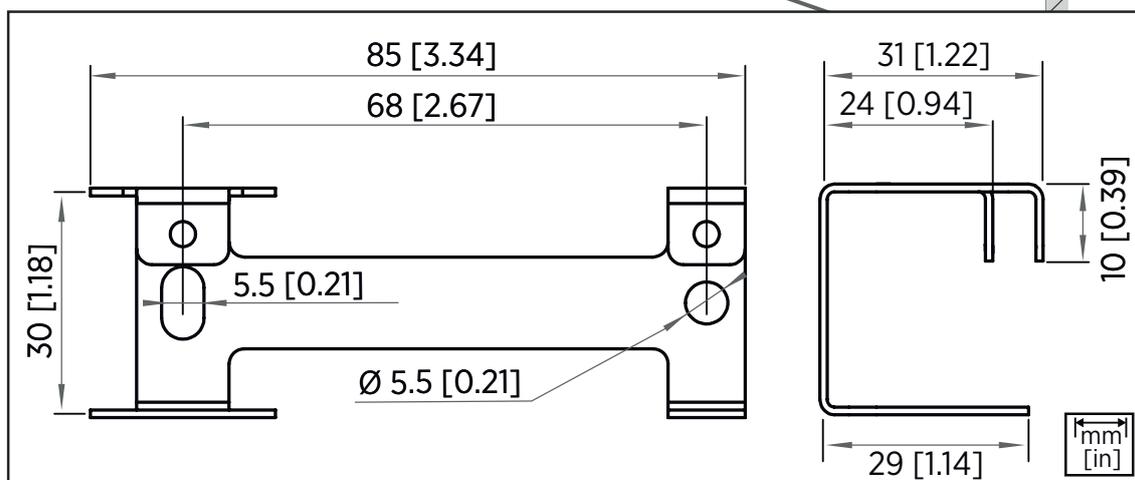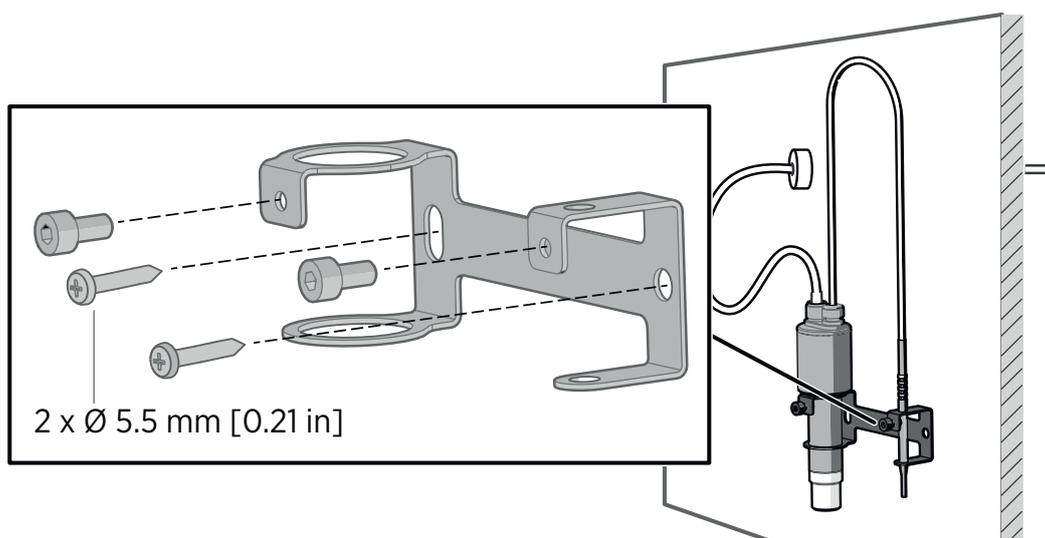

PUBLISHED BY
Vaisala Oyj
Vanha Nurmijärventie 21
FI-01670 Vantaa, Finland
Phone: +358 9 8949 1
© Vaisala 2018

All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. Any reproduction, transfer, distribution or storage of information contained in this document is strictly prohibited. All specifications – technical included – are subject to change without notice.

VAISALA